


Jig B

LAYOUTS	PCBS	HOLES
4	51	12

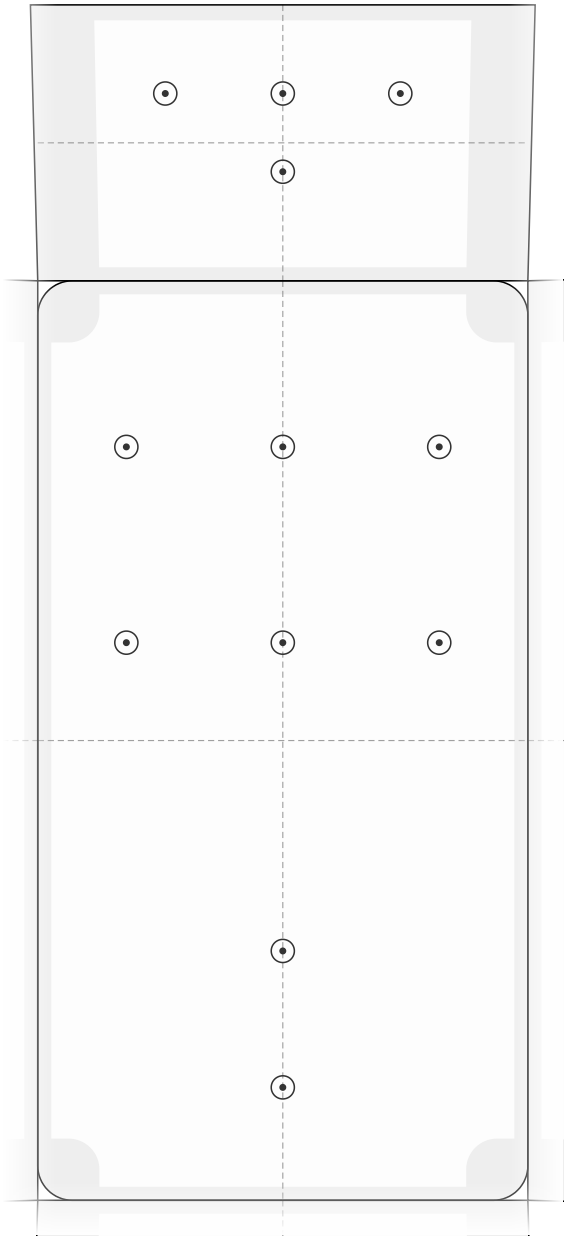

All 12 holes in jig B. Each build uses some of them.

How to use it

1. Find your PCB in this pack. The page it is on shows which holes that layout uses.
2. Sit the jig on the enclosure so the walls wrap the sides, and hold it down.
3. Centre punch through those holes, and only those.
4. Take the jig off and drill each mark, to suit the hardware you are fitting.

Every hole in the jig is the same size, because the jig marks where to drill, not how big. It is not a drill guide: punch through it, then take it off and drill.


What is inside

A build that is not listed here needs jig A.

1-Knob (Type 1)	7	PCBs
5-Knob (Type 1)	15	PCBs
5-Knob (Type 2)	5	PCBs
6-Knob (Type 1)	24	PCBs

125B 1-Knob (Type 1)

Jig B · punch through these 6 holes, leave the rest

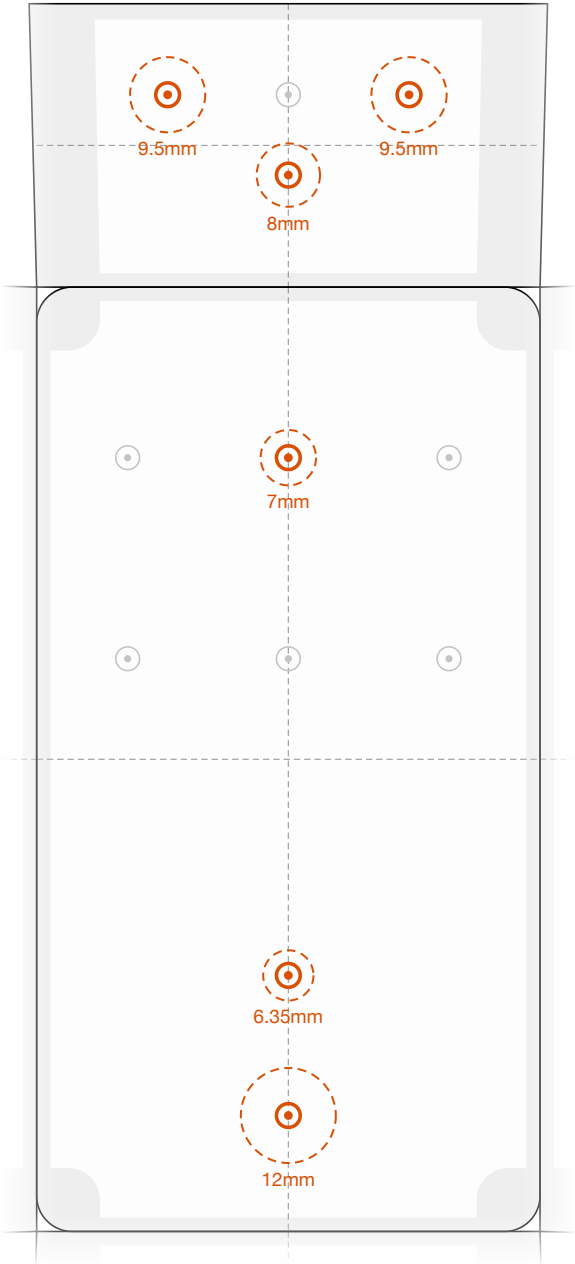

TYPICAL SIZES

1	12mm	Footswitch
2	9.5mm	Jack
1	8mm	DC Jack
1	7mm	Pot
1	6.35mm	LED

A guide, not a specification. Hardware varies, so measure what you are fitting and drill to that.

PCBs for 125B 1-Knob (Type 1) 7

Amentum Boost
Black Tiger Boost


Je T'aime
Mini-Muffin Fuzz

Station Wah
Triangulum Boost

Two Sticks of Derm Fuzz

125B 5-Knob (Type 1)

Jig B · punch through these 10 holes, leave the rest

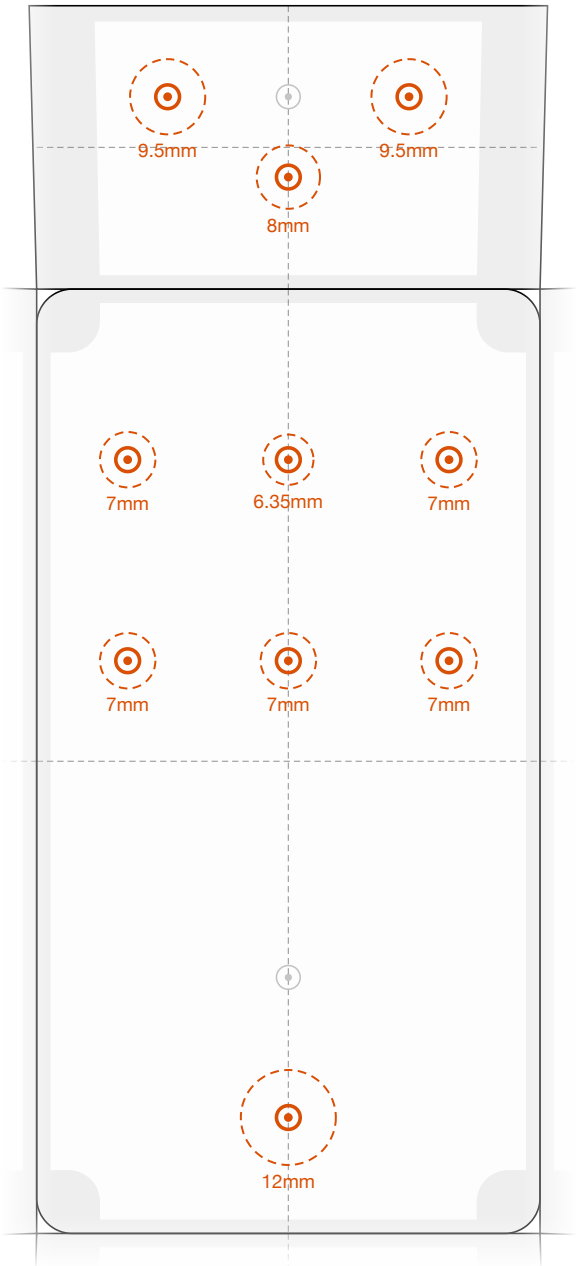

TYPICAL SIZES

1	12mm	Footswitch
2	9.5mm	Jack
1	8mm	DC Jack
5	7mm	Pot
1	6.35mm	LED


A guide, not a specification. Hardware varies, so measure what you are fitting and drill to that.

PCBs for 125B 5-Knob (Type 1) 15

Angry Charles	Gerkin Fuzz	Magnetron Delay	PolyHog
Chalumeau	Guardian OD	Neurocyton Preamp	Van Pelt Drive
FET City Drive	Guvernator Distortion	Oroku Drive	XB-MB Preamp
Fuzz Foundry	Little Debbie	Oxide Distortion	

125B 5-Knob (Type 2)

Jig B · punch through these 10 holes, leave the rest

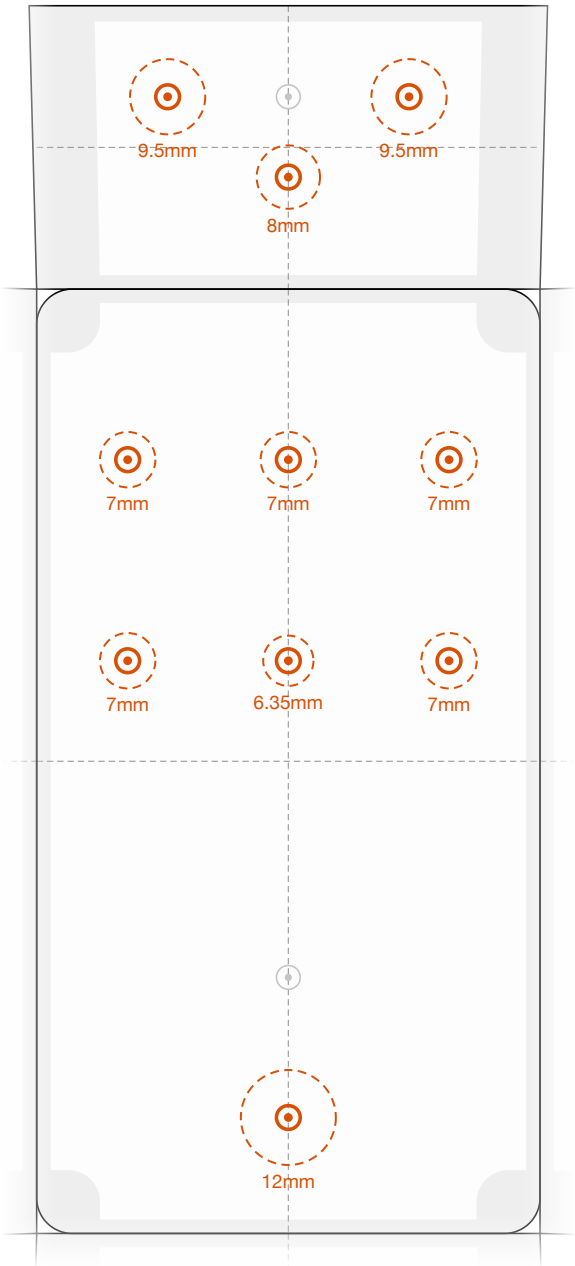

TYPICAL SIZES

1	12mm	Footswitch
2	9.5mm	Jack
1	8mm	DC Jack
5	7mm	Pot
1	6.35mm	LED

A guide, not a specification. Hardware varies, so measure what you are fitting and drill to that.

PCBs for 125B 5-Knob (Type 2) 5


Dung Beetle
Fuzz Aldrin

Marsh Fuzz
Photon Vibe

Prince Albert Overdrive

125B 6-Knob (Type 1)

Jig B · punch through these 11 holes, leave the rest

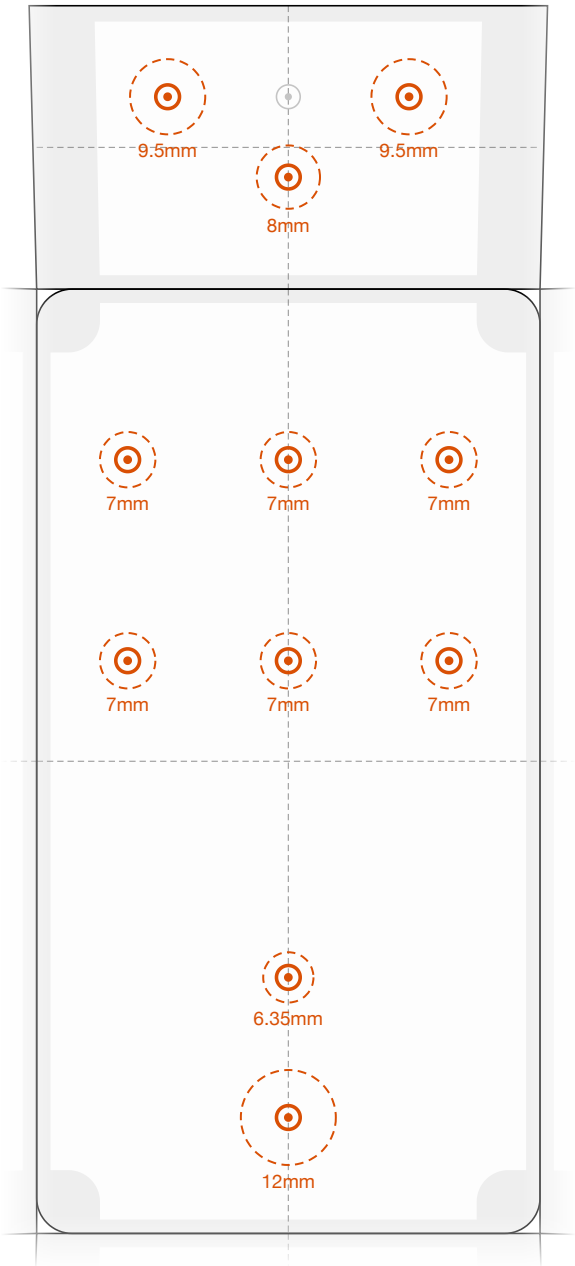

TYPICAL SIZES

1	12mm	Footswitch
2	9.5mm	Jack
1	8mm	DC Jack
6	7mm	Pot
1	6.35mm	LED

A guide, not a specification. Hardware varies, so measure what you are fitting and drill to that.

PCBs for 125B 6-Knob (Type 1) 24

6-Band EQ (Potentiometer Version)	Dark Rift Delay	DMD-2 Digital Modulated Delay	Sea Horse
Bayonet Fuzz	Death Cap	Frost Drive	Sea Monk Overdrive
Blue Shoe Gai Pan Distortion	Deflector Reverb	M800 Overdrive	Thermionic Distortion
Boogie Monster	Delegate Compressor	Organ Donor	Thunder Pipe Fuzz
Captain Bit	Delegate Compressor (Boneyard Edition)	Pitch Witch	Trojan Horse
Chela Overdrive	Dingo Distortion	Referee EQ	UniCab